EVERSAFE®

Travel | Safe | Eversafe®

Instruction Manual
V2 Backpack
All Versions

4.7-5mm Pad Lock

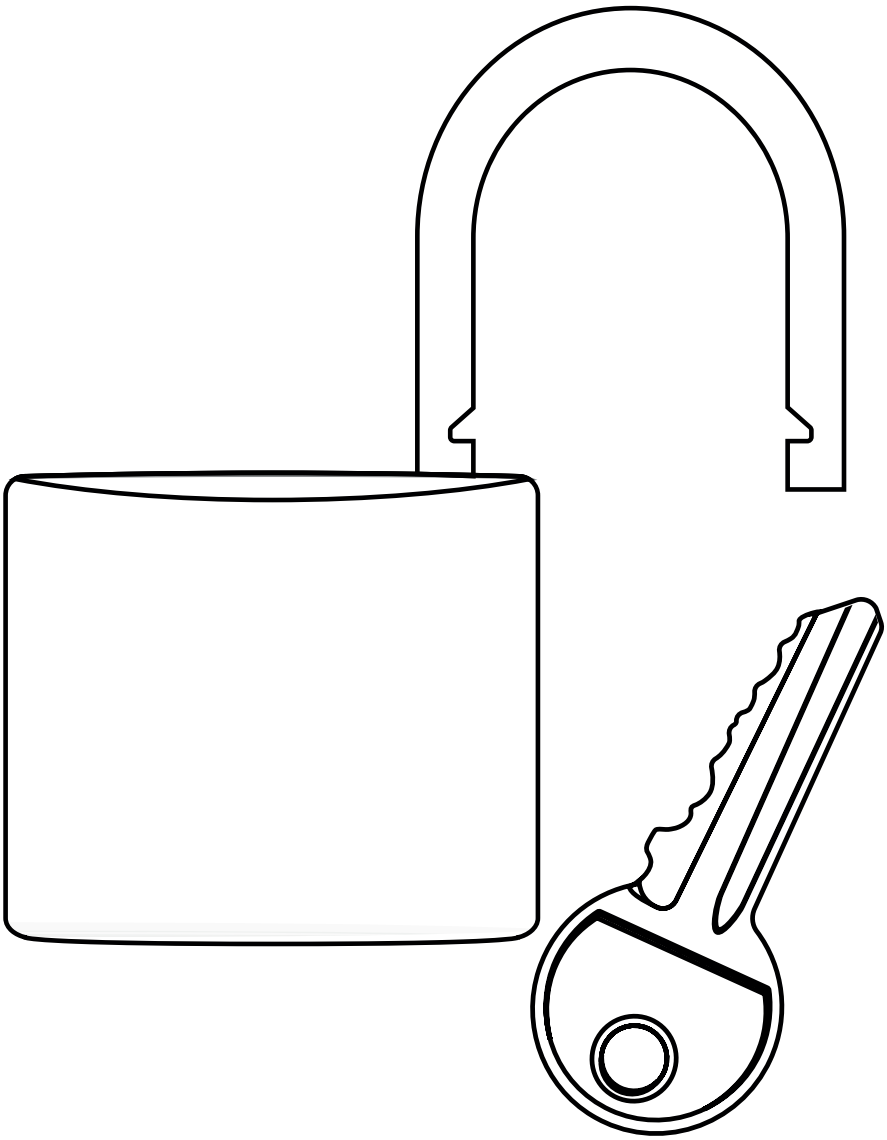

High Quality,
Hardened Padlock

Cable Lock (Retractable)

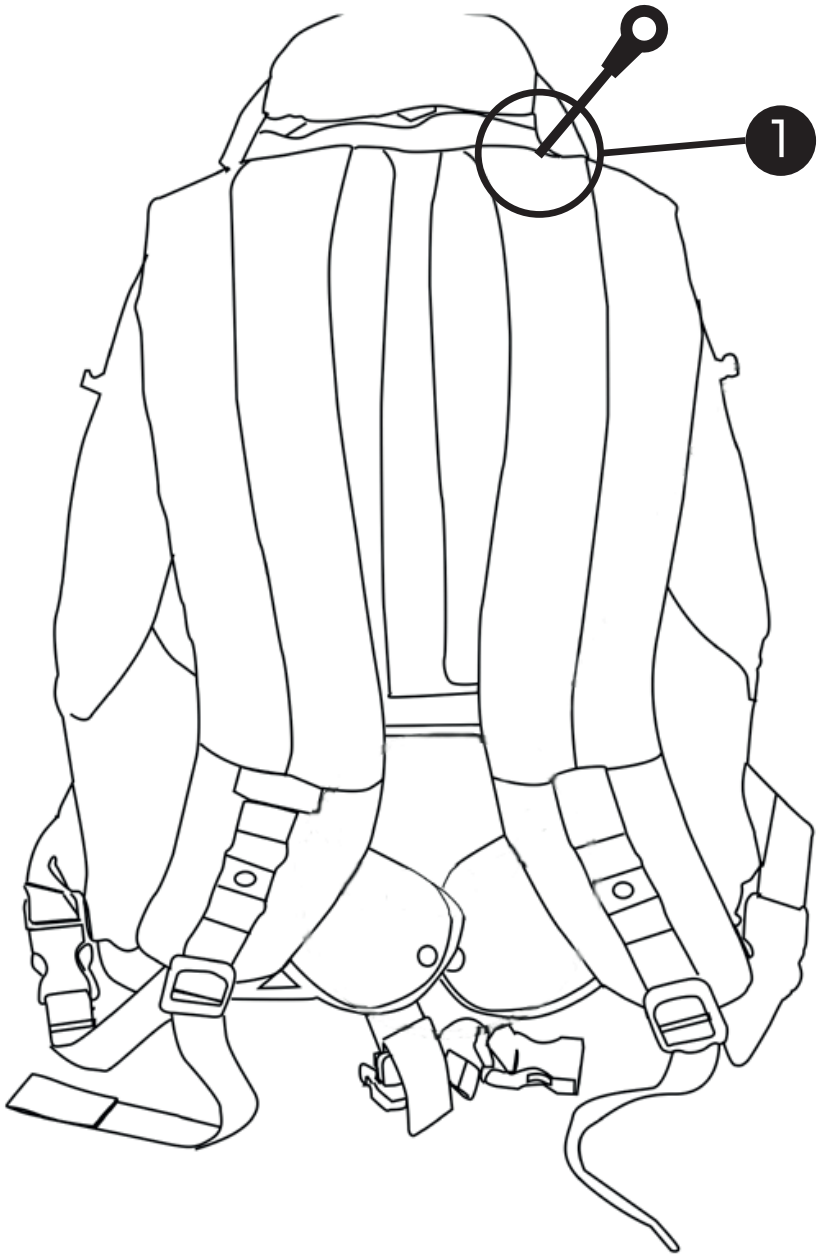

1 Pull from bag to lock, attach through strap cable after wrapping it around pole or other fixture. Simply push back in when not in use.

1 Open the lock using key

Secure

The cable strap can be easily locked to multiple secure fixings, such as,

- Closed leg tables
- Chairs
- Benches
- Poles

Installing the Safedock

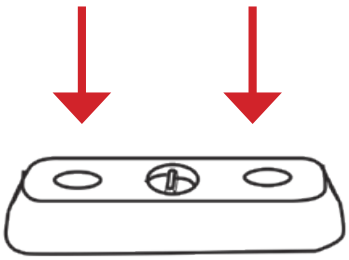

When installing the Safedock use the dock holes as a guide when drilling.

Things you will need

- Drills and drill bits
- Suitable fixings (wood or concrete)

Note

For optimum security it is best to install the Safedock on a level surface

1. Drill two pilot holes using the Safedock as a guide marker

2. 2 Using the fixings suitable for the surface drill holes and screw your Safedock down

Wood

Fix the Safedock to wooden floors and furniture using standard wood screws (9mm / 3/8 in)

Concrete

Fix to a concrete surface using concrete anchors or screws (9mm / 3/8 in)

Car

When fixing a Safedock to a car we recommend getting the product installed by a professional at a car body shop

Caution

When installing the Safedock ensure there are no pipes, underfloor heating or wires that could get damaged in the process.

Visit the Eversafe website to watch instructional videos on how to install your Safedock

Contents

Backpack

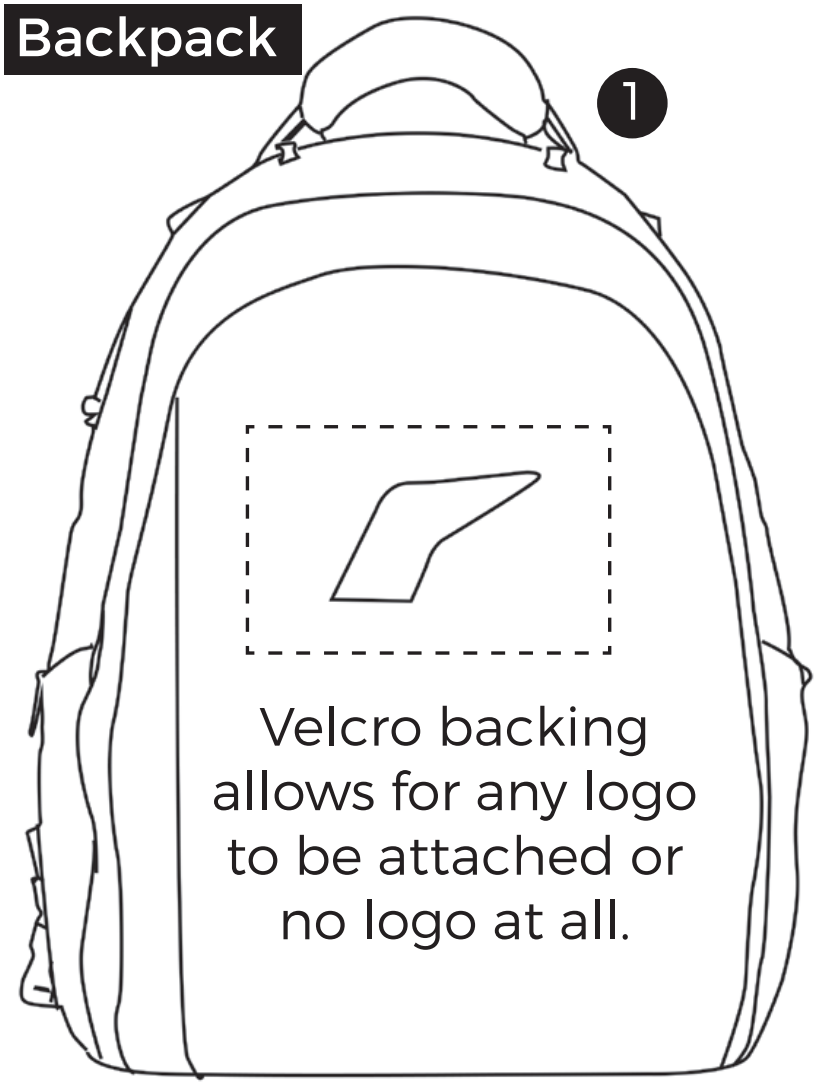

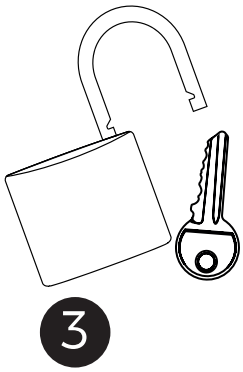

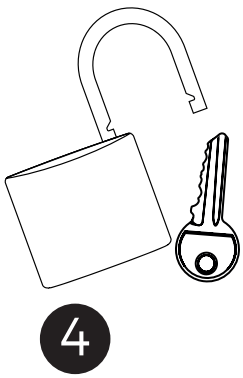

1. Eversafe Backpack
2. Zipper Cover Lock Cable
3. Zipper Padlock
4. Zipper Cover Pad Lock

To padlock zipper. Pulls zips together and insert padlock in both locking hoops.

Zipper Cover

For optimum security lock down the zipper cover using the zipper cable and pad lock.

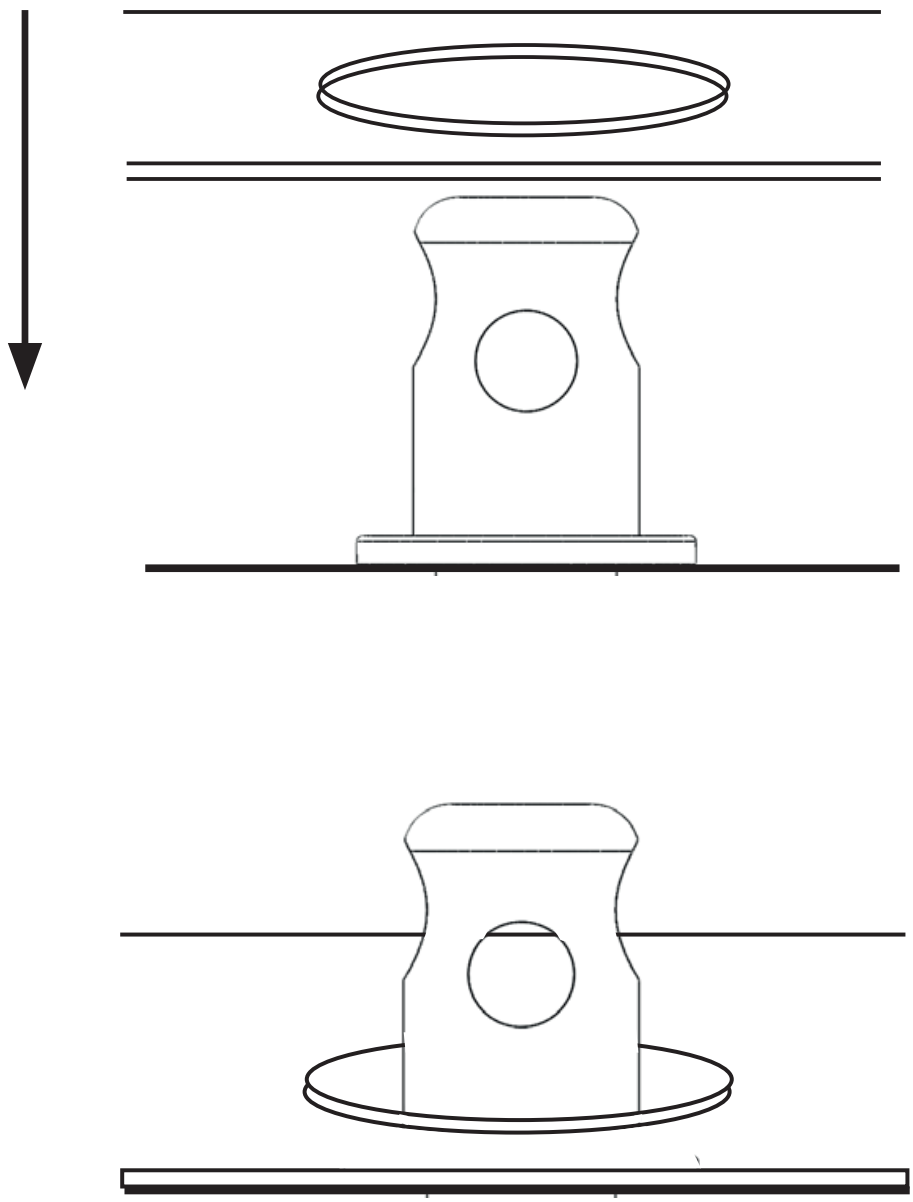

Pull the zipper cover over the zip inserting the pillars into the eyelets.

Note

The zipper cable is located in the outside pocket in the front of the backpack.

2

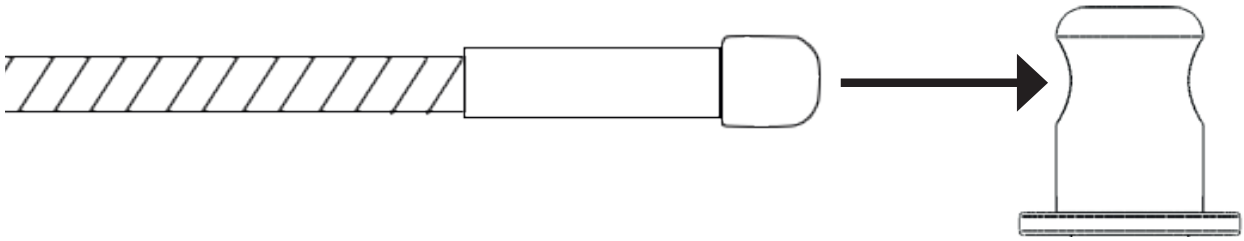

Insert the cable through all six pillars. Feed the cable through the pillar with two holes last.

3

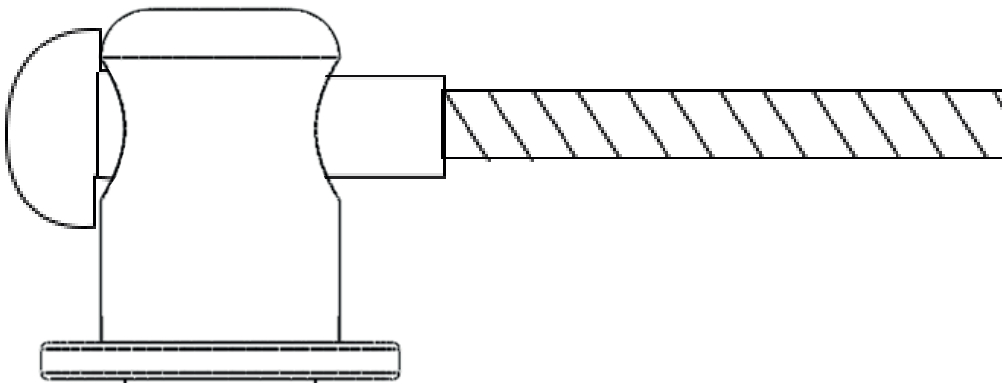

The wider cable swage will stop the cable from coming through all the way.

4

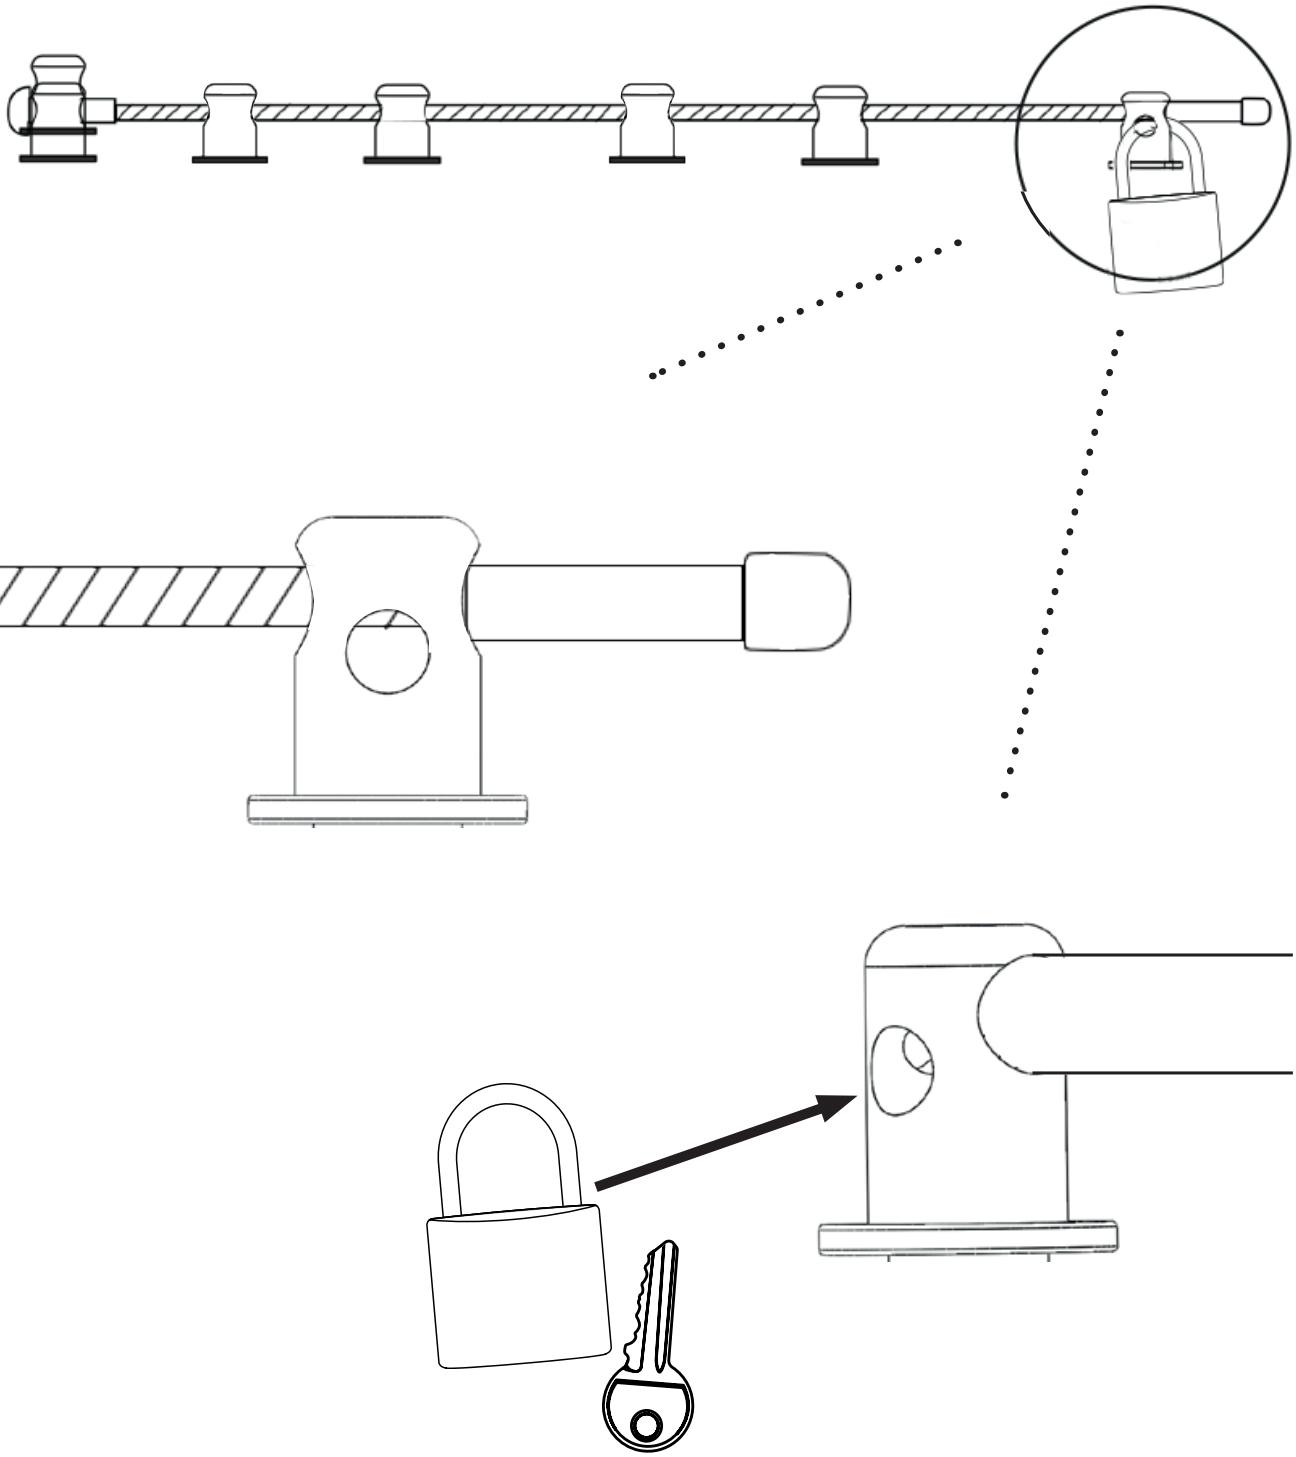

Once the cable has come through all six pillars lock the cover in place at the pillar containing two holes with the keyed padlock.

Base Unit (sold separately)

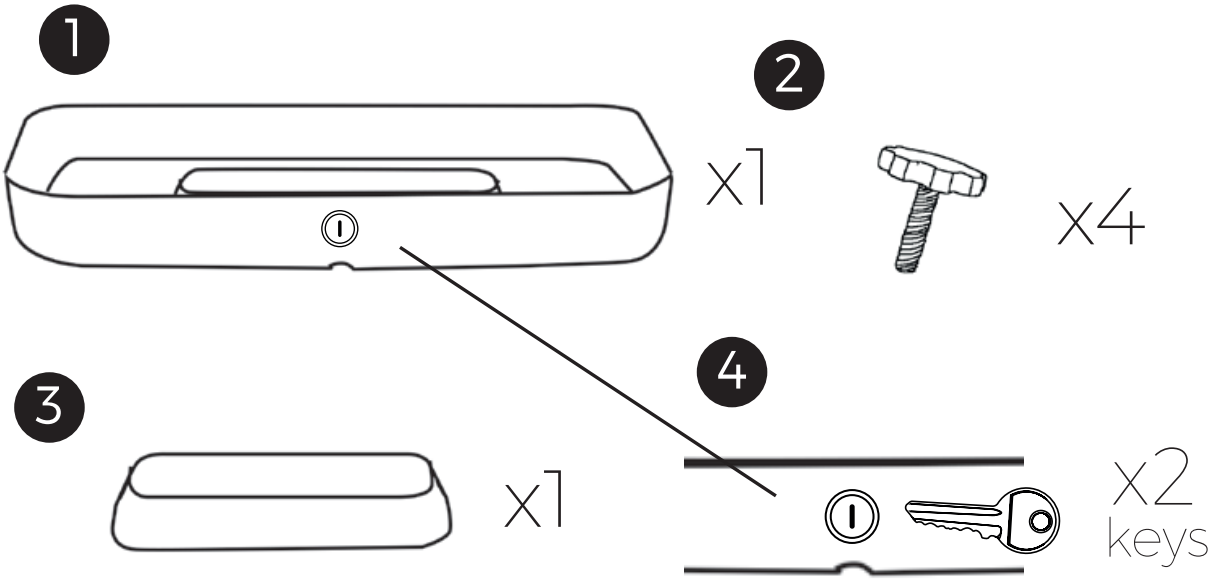

1. Safedock Base
2. 20mm Thumbscrews
3. Safedock
4. Keyed Euro Lock activates dock release

Base Attachment

Remove Backpack Base Feet

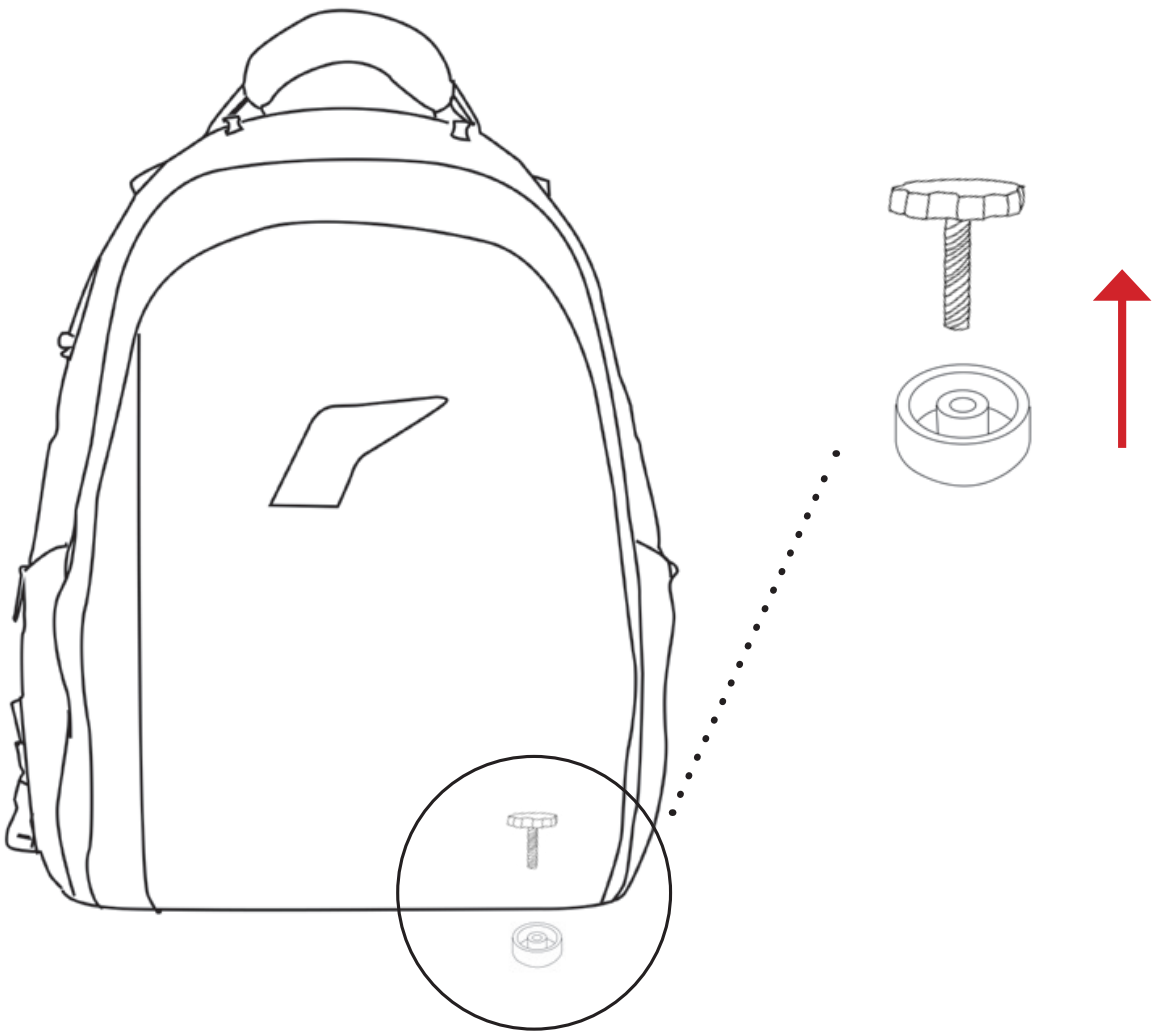

1. Remove the base feet and 12mm thumbscrews from the bottom of the backpack

Note

Retain feet and thumbscrews for future use

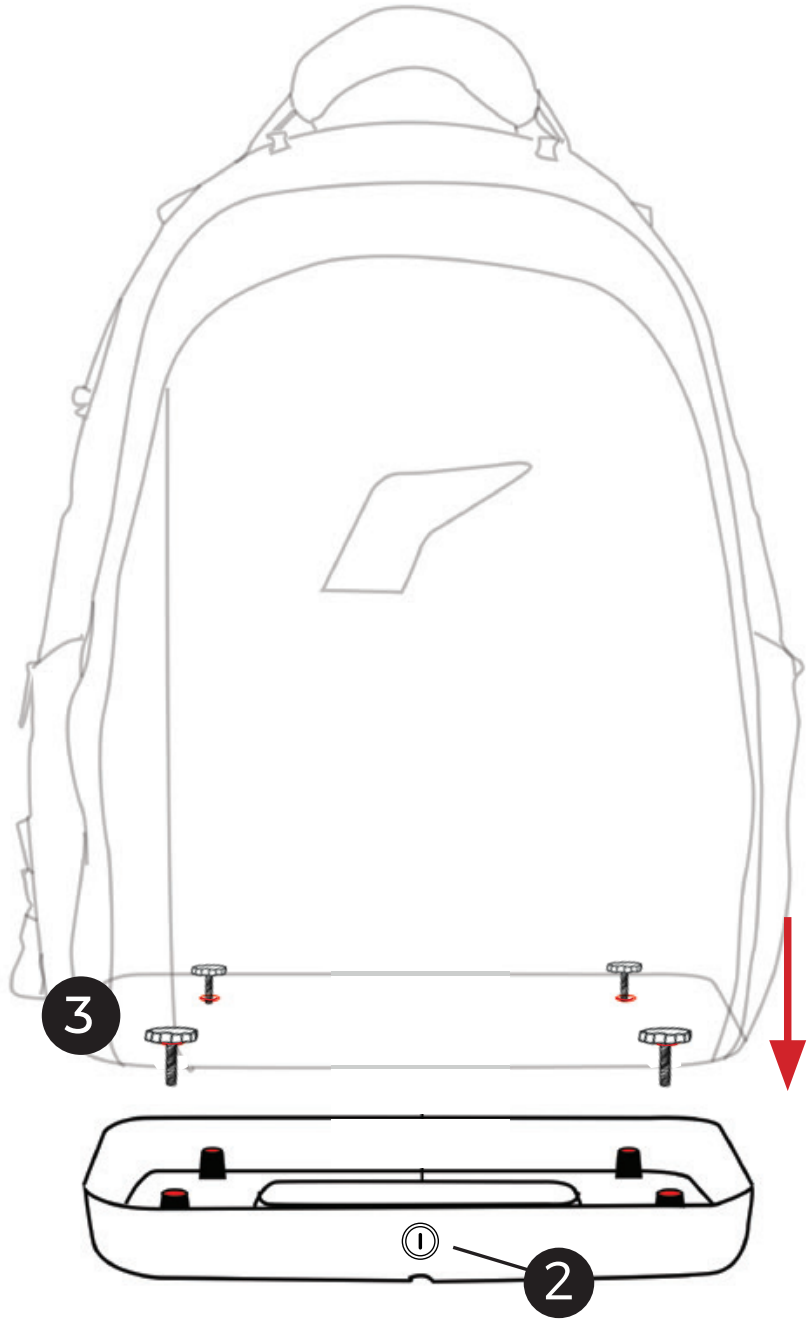

2 Keyed dock release

3 Place the 25mm thumbscrews through the holes located in the bottom of the bag

4 Insert the screws into the holes located in the base and twist to tighten

5 Insert key and turn to release dock

Note

When reattaching the base feet follow steps 3 and 4

Eversafe Technologies Limited
8 Monaghan Court, Monaghan Street
Newry, Co Down
UK BT35 6BH
Phone UK: +44 7769 552267
Email: info@eversafetech.com

Eversafe USA Inc.
3877 Copper Ridge Ct,
Amelia, OHIO 45102
Phone US: 1-602 390 7044
Email: info@eversafetech.com

www.eversafetech.com